



Camera

WVN Studio Guide

Camera 2



Large studios have two cameras; small studios only have a single camera. The main camera (Camera 1) is shown below and the second camera (Camera 2) is shown on the right. All cameras are motorised and controlled via the studio controller.



Camera 1

Camera 1 has an Auto-point facility, which automatically tracks the person who is speaking. The Auto-point feature can take a few seconds to find the speaker within the room. Each camera also has preset positions, which you can select with a single key press. Camera 2 is often located with the confidence monitors as illustrated on page 2 of this guide.

The four arrow keys control the direction of movement of the camera:
◀ pan left; ▶ pan right; ▲ tilt up; ▼ tilt down. Movement is from the perspective of the camera, so using the pan left button will move the camera to your right.

Press the **Auto ON** button to activate the Auto-point feature. Once activated the symbol below will appear on the local picture screen to indicate that the feature is active.



When the Auto-point feature is on, the manual camera movement controls will not function



Press this button to zoom in.

Press this button to zoom out.

Press the **Presets** button to access the camera presets screen. See page 2 of this guide for more details.

Press the **Auto OFF** button to de-activate the Auto-point feature. Manual camera movement is now possible.

Camera Locations

The main camera (Camera 1) is located above the Remote Picture monitor, as illustrated below right.



The second camera (Camera 2) may be located in any convenient position within the studio. However, it is often located adjacent to the confidence monitors, which may be wall-mounted as illustrated on the left.

This is to ensure that a person delivering a presentation from the front of the studio, perhaps standing beside the whiteboard, is in shot when they are looking at the remote picture on the remote confidence monitor.



Camera Presets

Each camera has four preset positions. The presets allow you to store a particular camera position and recall it with a single key-press. The preset stores the pan, tilt and zoom settings of the camera. To access the preset selection screen, press the **Presets** button on the camera control screen, as shown on the right.



To recall a preset, select a preset from 1-4.

Each institution will normally set studio camera presets. Saving personal presets, for recall by individuals, is currently not possible.

If you have specific requirements for camera presets, please discuss these with your local support contact.

Auto-point

The Auto-point feature enables Camera 1 to track the speaker. The illustration on the right shows the control screen for Camera 1 with the Auto-point facility **OFF**. To activate, press the **Auto ON** button. Once activated, manual control of Camera 1 is not possible. The Auto-point feature is not available for Camera 2.



To return to the main control screen when you have finished controlling the camera press the **Back** or the **Home** button.