



DVD/Video Cassette Recorder

WVN Studio Guide

The DVD/Video Cassette Recorder (VCR) is usually located in the cabinet on the left within the studio. It is used to display a video or DVD, which can be viewed at all studios in the conference. It may also be used to record the picture shown on the remote monitor to video or DVD-R/RW.



When viewing a DVD, press the **SKIP BACK** button to go back to the start of the current chapter. (Pressing more than once skips back multiple chapters.)

In VCR mode, press the **SKIP BACK** button to rewind the tape back to the starting (index) point of the previous recording on the tape. (The tape will start to play automatically when it reaches the index point.)

Press the **REW** button when a DVD or tape is playing to activate *visual search backwards*. (Use the **PLAY** button to resume normal playback.)

In VCR mode, press the **REW** button to rewind the tape. (Use the **STOP** button when the tape has rewound sufficiently.)

Press the **PAUSE** button when a tape or DVD is playing to freeze the picture and prevent it from playing. Pressing the **PAUSE** button when the tape or DVD is already paused advances the tape or DVD forward by one frame for each press.

Press the **TOGGLE DVD/VCR** button to switch between DVD and VCR modes. When in DVD mode press the **TOGGLE DVD/VCR** button to switch to VCR mode, similarly, when in VCR mode press the **TOGGLE DVD/VCR** button to switch to DVD mode.

The current mode is indicated by coloured lights on the front of the DVD/VCR unit. A **GREEN** light on the right of the unit indicates DVD mode, and a **RED** light on the left side of the unit indicates VCR mode. When the DVD/VCR is being previewed the current mode is also indicated on screen.

Note: If the **TOGGLE DVD/VCR** button is pressed while a tape or DVD is in operation, the mode changes but the activity of the previous mode will continue.

Press this button to **STOP** a DVD or tape from playing. Before stopping the DVD or tape, select another picture (e.g. the camera) to preview and send.

Press the **PLAY** button to start or resume playing a DVD or tape.

When viewing a DVD, press the **SKIP FORWARD** button to skip forward to the start of the next chapter. (Pressing more than once skips forward multiple chapters.)


In VCR mode, press the **SKIP FORWARD** button to fast-forward the tape to the starting (index) point of the next recording on the tape. (The tape will start to play automatically when it reaches the index point.)

Press the **SEND** button to send the DVD or video image to the other studios in the conference. The picture will appear on the local monitors and at this point the sound will begin. You can use the projector controls to display the video on the whiteboard screen.

Press the **PREVIEW** button to display the DVD or video on the preview monitor. Make sure a DVD or tape is playing or paused before you do this.

Press the **FFW** button when a tape or DVD is playing to activate *visual search forwards*. (Use the **PLAY** button to resume normal playback.)

In VCR mode, press the **FFW** button to fast-forward the tape. (Use the **STOP** button when the tape has moved forward sufficiently.)

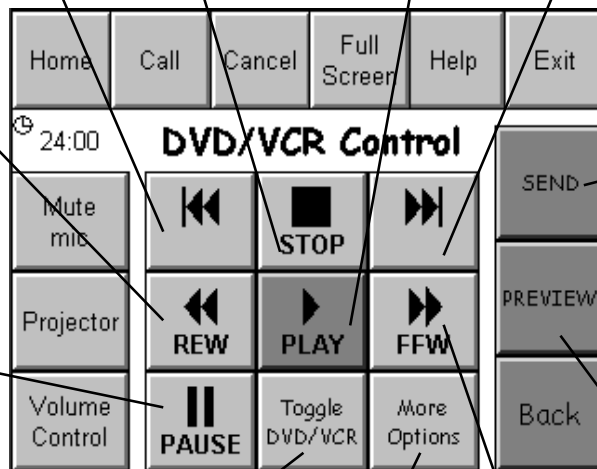

Press the **MORE OPTIONS** button to move to a second page on the Touchscreen, which includes setup and recording controls.

At the end of your session, use the appropriate button on the front panel of the DVD/VCR to retrieve your DVD or videotape. To eject a DVD press the Open/Close button below the DVD tray, and to eject a videotape press the EJECT button below the videotape drawer. Note: To open the DVD tray the unit must be in DVD/VCR mode.

