



## Projector

## WVN Studio Guide

The projector is used to display the images, which appear on the various studio screens, onto the interactive whiteboard screen.

The projector is usually mounted in the studio ceiling and when not in use remains in standby mode. It is automatically switched on and off as part of the studio startup and shutdown procedures.

Unless undergoing maintenance, the projector should not be touched. The projector is controlled entirely from the studio touch screen controller.



Press this button to show the **Remote Picture** on the whiteboard screen (i.e. display the picture from the remote monitor).

If the projector has been switched to Standby mode use the **On** button to reactivate the unit.

You cannot operate any projector controls for three minutes after pressing this button.

Use this button to display the **Local Picture** from the local monitor on the whiteboard.

This setting should be used to display the document camera picture or the video on the whiteboard.

You may decide to switch off the projector if it is not required for long periods. To do this, press the **Standby** button.

You cannot operate any projector controls for three minutes after pressing this button.

To display the **Room PC** screen on the interactive whiteboard, press this button.

Use this setting to display presentations produced using Microsoft® PowerPoint®.

Home	Call	Cancel	Help	Exit
14:38	<b>Projector Control</b>			
Mute mic	Remote Picture	On		
Projector	Local Picture	Standby		
Volume Control	Room PC	Back		

To return to the main control screen when you have finished controlling the projector, press the **Back** or the **Home** button.